


Instructions of Beverage House



Beverage House

Thank you for buy our product ! Please read the instruction at length before use , and keep it carefully for future reference.



Safety Warning and Attentions:

1. Remember to fill the water tank before it is electrified.
2. Please put the foot screw on the machine bottom down to the ground in case of instability.
3. Prohibit moving the machine after it is electrified.
4. It is suitable for voltage of 220V/110V.
5. Please put the power to the place out of reach for children in case of electric shock and other accidents.
6. Don't use wet hands to pull mains connectors and you should pinch plug handle to pull it out instead of pulling directly. Please use special power line and insert plug into socket firmly.
7. Don't let the machine exposed to the rain.

Component Description





Gun base

Gift place

Coins box

CD player

Code table:
quantities of
coins

Confirm button

Delete button

Set button



Speaker

Coin machine

Prize out

The adjustment:

1. Press the Set button to enter into the set.
2. Time: Press the Confirm button to choose the time. Can adjustable from 30 to 180 seconds. Press the Set button to enter the next options.
3. Lottery difficulty: Easy, Normal, Hard. Press the Confirm button to choose the difficulty.
4. Volume: 0% to 100% adjustable.
5. Language: Chinese, English. Press the Confirm button to choose the language.
6. Quantities of coins for 1 play: 0 to 10 coins. Press the Confirm button to choose the quantities of coins.
7. Mode: Quit the drinks, quit the lottery, no gift. Press the Confirm button to choose. The machine just can quit the drinks.
8. Scores of clearance: 30 to 200 scores can adjustable. Press the Confirm button to choose the scores.
9. Recovery.
10. Correction: Press the Confirm button, then enter the correction mode, let the water mouth on the top left corner, press the Confirm button after correcting it. Then press the Set button to correct on the bottom right corner. After correcting, press the Confirm button.
11. Test: Reward drinks A, Reward drinks B, Reward gift, Lotteries awards. Press the Confirm button to choose the test, then choose the "Quit" to quit.
12. Exit. Press the Confirm button to choose the Exit.

Product Specification and Game Rules:

Name	Power	Size	Weight	Voltage
Beverage House	450W	80*130*160cm	150KG	220V



Rules of the game/ Instructions:

1. Insert the coins and start the game.
2. Aim at the target then use the sprout to beat it and get corresponding scores.
3. The player will lose blood while being attacked and game over when lose all the blood.
4. Every time break a blockade successfully, there'll be a Lucky Draw(Lucky Turntable), and gifts are drinks or lotteries.

Trouble Shooting

1. It doesn't run after being electrified.

Check whether the fuse of AC input is ok.

Check whether the power and voltage is normal.

2. No display after power on.

Check whether the LCD is connected.

Check whether the VGA plug is connected.



3. The water gun aims badly

Set gun direction anew.

Check whether the locator is ok.

4. The water gun doesn't shoot water.

Check whether water pump works well.

Check whether the water is under the entrance of water pump.

Check whether the water gun is stuck by sundries.

5. Display "please take gift away" in drink mode.

Check whether the light eyes of prize is out of order.

Check whether the light eyes of prize is stuck by sundries.

6. "Prizes" or "Lotteries" flash continuously

Check whether the lack of gifts or lotteries

Check whether the gifts motor or the lotteries motor is stuck.

7. Right drink installation method: 6 bottles drinks each spring.

For More Technical Support :



DYNAMIC
AMUSEMENT

www.amusementindia.in

Whatsapp/Viber/Wechat:

+91-9811263307

